

Thank you for purchasing a pair of the MP3

This Operation Guide should answer most of your questions.

You can also contact us at www.camshades.com



STORAGE & BATTERY LIFE

Storage Basics:



- This device has 4GB of internal memory.
- It also offers microSD card* slot for extended memory.
- In the default saving mode, if microSD card is inserted, data will be saved to the SD card. If no card is inserted the data will be saved to the built in memory.
- When the memory is full, the LED light will stop blinking and start data saving; If the built-in memory is full, the device will turn off after saving data.
- Pull out the microSD card when the device is turned off to avoid data loss or damages to the device or microSD card.

Note: You may need to format the microSD card (*not included) before using. Check the instruction manual that came with your card for full details.

Battery Life:

- If the device fails to start, it is likely that the battery is out and needs to be recharged. **Note:** For initial three charges make sure to charge the li-polymer battery for 12 hours to ensure best performance. Do not charge it over 24 hours.
- Charge the battery using USB cable or using the included AC adapter. Usually a full charge requires 3-4 hours.
- The red LED light on the charger will turn on when the device is recharging and will turn green when the battery is fully charged.
- If you haven't used the device for a long period of time, recharge the battery first before using it.
- It is better to charge the battery in power-off mode for faster recharge.


Reset:

If the CamShades fail to power on after they have been charged, and the Power button is held for 5 seconds it may be necessary to reset. Carefully use a paper clip and press the reset button, and then try to start again. (see diagram in next section)

OPERATION

Switch ON or OFF/ Music

To power ON, press and hold the ON/OFF button for 4-5 seconds until the BLUE LED is ON. The device is then in the MP3 music playback mode. Plug your headphones in and the music will automatically start and you can advance to the next song by pressing (4). Hold (4) down for a longer amount of time and the volume will go up Hold (2) down and the volume will go down. You can pause the music by pressing (3). Holding down the #3 on/off button will power down the CamShades.

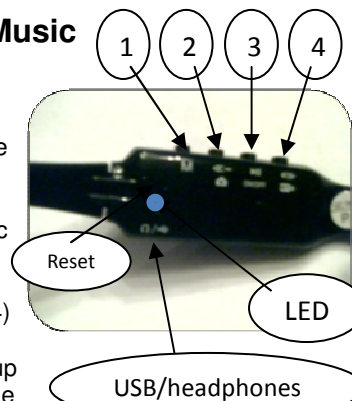

Recording and Camera Mode

Press the M (1) button to switch to "Camera Mode" the LED will turn YELLOW. Press the record button (4) quickly. The yellow light flashes while the video is being recorded. Press the record again and the recording will stop. While the yellow LED is solid you can press the Still Camera button (2) and about 3 seconds later you will snap a still digital photo. If you have the ear piece in you will hear a shutter sound. You can then go back to the video camera by pressing (4) **Excess movement while recording can cause blurry video**

CONNECTING THE CAMSHADES TO A PC OR LAPTOP

Minimum System Requirements for viewing -Windows 98™, ME™, 2000™, XP™, Vista™----USB Port --- Media Player

1. Turn ON the Device First: Turn the device ON. (See above) The blue LED lights up. **Note:** Connect the USB Cable only after turning ON the device.

2. Connect the USB Cable: Insert one end of the included USB cable to the Headphone port marked with the USB symbol on the device and the other end to the USB port of your PC or laptop.



3. Driver Installation:


The first time you connect, the computer will recognize the newly added hardware and install the necessary driver. Once the driver is installed every time after this, most computers will automatically give you the option to "open folder" on the removable disk. This folder can also be found by clicking on "My Computer" then open "removable disk (f)". Reconnect the cable if the removable disk isn't shown.

4. View/Copy the Recorded Video and Still Pics

Open the "Camera Record" folder to view the recorded videos. **Note:** Video files open with your default video player. Files are saved in .avi video file format. Open the "Capture" folder to view the still pics (.jpg) Left click on the file you want to view. To save the file...Right click on the file name then click copy. Then right click onto a folder or drive that you want to save the file to and click "paste". Once you are sure the file is saved to your PC you can then delete the file from the CamShades folder to free up space for more recording. You can then burn the saved video to a DVD or upload it to the internet.

5. Loading Music onto device:

If you have MP3 music on your PC simply right click on the song you want and click copy. Then right click in the Audio Folder, for the device, and click paste. We have preloaded music and the Gospel of John, courtesy of NavPress. You can order the entire Bible and other Audio books at navpress.com

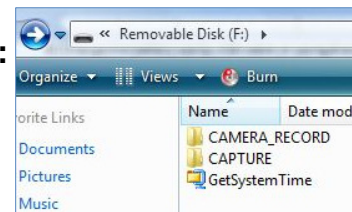

Setting the time: When the CamShades are plugged into the computer, open on the "Get System Time" zipped file, and follow instructions. When asked, make sure the time and date is correct, in the top left hand box and then click on the top box that says "Get System Time". This will allow the proper time and date to be on your videos.

Recording Video using the Micro SD Card from your cell phone

1) Remove the microSD card from your cell phone*.



2) Insert the microSD card from your cell phone to the microSD card slot in your device and follow the procedure from above to record video and photos. Once the video recording is done, remove the microSD card from the device and put it back on your cell phone.




3) Power ON your cell phone and look for the folder where the videos are by default saved. Use the video playback options to view the recorded video. Your phone must be able to read .AVI files, or you will need to convert the files to .3GP




4) You can upload and share recorded videos on websites such as You Tube.

Publish and Share Video

Publish and share your videos online on sites such as:

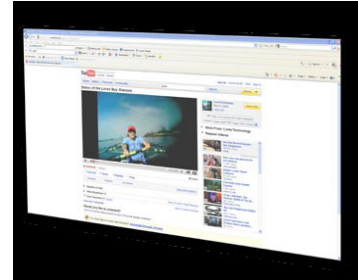

Or email your video by sending it as an attachment:

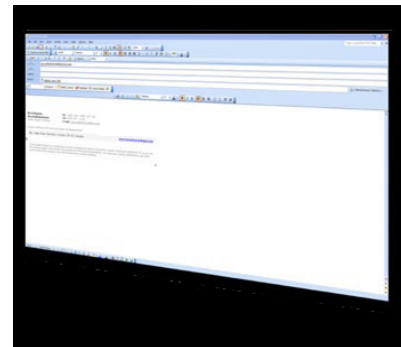

Warranty. CamShades products and accessories are guaranteed against manufacturing defects one (1) year from the original date of purchase. CamShades' sole obligation in the event of such defects during this period is to repair or replace the defective part or product with a comparable part or product at CamShades' sole discretion. Damage resulting from use, accident, or normal wear and tear is not covered by this or any warranty. CamShades assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from the use of this product. In no event shall CamShades, be liable for incidental or consequential damages relating to or resulting from the use of this product or any of its parts. We do not cover water damage. Please review your instructions carefully and take proper care. Returns or replacements of parts and/or products may be subject to shipping, handling, replacement and/or restocking fees. If your return qualifies for warranty coverage you must include your original receipt and a clearly written explanation of the problem. All product parts must be included with your return. Mail your original receipt and all product parts after you receive a return authorization number to: CamShades, 93767 Dorsey Lane, Junction City, OR 97448 Questions? Email sales@camshades.com or call 541-606-7274



Replacement lens available in Yellow, Clear and Standard Polarized



Neck Strap/
Retainers
available in
Camo, Black,
Blue and Pink



Optional
4 GB
Micro
SD card

Order above accessories at:

www.camshades.com

www.camshades.com